



MARINA

LAV

43° 29' 30" N 16° 32' 05" E

**GRAND HOTEL LAV d.o.o.**

GRLJEVAČKA 2/A, 21312 PODSTRANA, HRVATSKA

OIB: 44693068925; PDV ID: HR44693068925; MBS: 060185094

Tel: +385 21 500 388; Fax: +385 21 500 387

e-mail: [info@marinalav.hr](mailto:info@marinalav.hr)

[www.marinalav.hr](http://www.marinalav.hr)

Zagrebačka banka d.d., Zagreb, Trg Bana Josipa Jelačića 10

IBAN: HR1323600001502105858, SWIFT-BIC: ZABHR2X

## INSTRUCTIONS FOR SHORE POWER SUPPLY CONNECTION

Marina Lav provides direct, grounded connection to the shore power supply.

### **In general**

- o If your vessel doesn't have the insulation transformer for separating the vessel's electrical system from the shore power supply, there is an increased risk of galvanic corrosion (electrolysis), which can cause damage to your vessel
- o The marina has power supply of 220 V, 50 Hz and 400 V, 50 Hz three-phase, supplied from the power socket.
- o Adequate measures must be taken to prevent the flexible connection cable or the connectors from falling into the water during connecting to or disconnecting from the power supply.
- o Only one flexible connection cable from the vessel can be connected to the socket.
- o Only one vessel can be connected to one socket.
- o The flexible connection cable should be undamaged and in one piece without the connectors, and the connectors (movable sockets) should be in good condition.
- o The moisture, dust and salt from the vessel's connection box can create a serious danger. Checking the connection box, cleaning and drying it if necessary, before plugging the flexible connection cable in from marina shore is mandatory.
- o Every attempt of fixing or modifying for an untrained person is dangerous. Marina personnel should be informed in case of any difficulties.

### **On check-in**

- o After berthing, it is necessary to turn all the appliances on the vessel off.
- o Check the flexible cable and its connectors (movable sockets) and make sure it is undamaged and in good condition.
- o First connect the flexible cable on the vessel's power box and then on shore power supply. o Put the cable on a place where it won't get damaged and make sure it doesn't cause a danger to others.

### **Before checking-out**

- o Turn off all the appliances on the vessel.
- o Disconnect the flexible cable from the shore power connection, and then from the vessel's power box.

Sud upisa: Trgovački sud u Splitu

Temeljni kapital uplaćen u cijelosti: 165.102.400,00 kn

Uprava: Dijana Vujević i Ömer Lutfi Müftüler